



# HoldPeak® HP-720/920/1120 Non-contact infrared thermometer Instruction manual

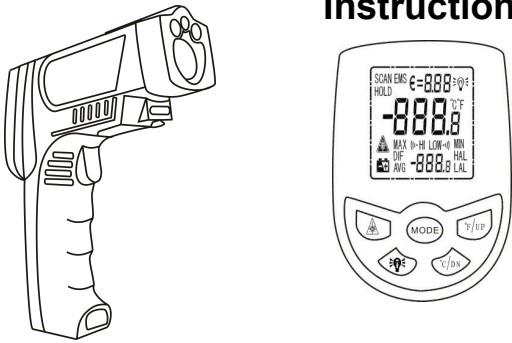

## 1. Introduction

Compact, rugged and easy to use. Just aim and push the button, read current surface temperatures in less than a second. Safely measure surface temperatures of hot, hazardous or hard-to-reach objects without contact.

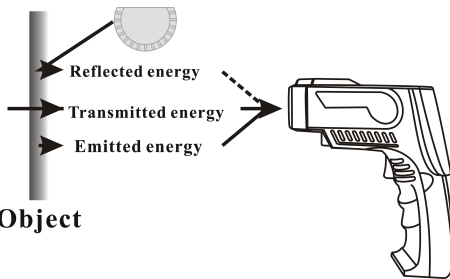


### How it works

Infrared thermometer measures the surface temperature of an object. The unit's optics sense emitted, reflected, and transmitted energy which is collect and focused onto a detector. The unit's electronics transmitted energy which is display on the unit. For increased ease and accuracy the laser pointer makes aiming even more precise.

### Cautions

Infrared thermometer should be protected for the following:


- EMF(electro-magnetic fields) from arc welders, induction heaters.
- Thermal shock(cause by large or abrupt ambient temperature changes allow 1 hours for unit to stabilize before use).
- Do not leave the unit on or near objects of high temperature.

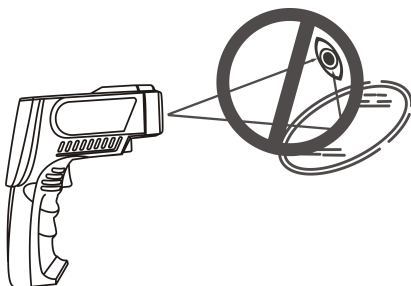

### Warning


Do not point laser at eye or indirectly off reflective surfaces.

1. When take measurement, point thermometer toward the object to be measured and hold the yellow trigger. The object under test should be large than the spot size calculated by the field of view diagram.
2. Distance & spot size: As the distance from the object increase, the spot size of measuring area becomes large.

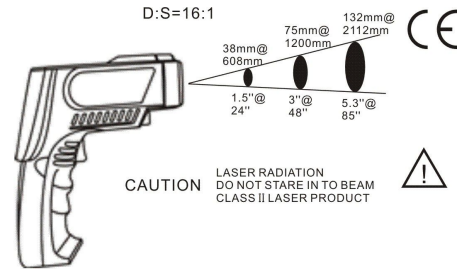

3. Field of view: Make sure the target is larger than the unit's spot size. The smaller the target the close measure distance. When accuracy is critical, make sure the target is at least twice as large as the spot size.
4. Emissivity: Most organic materials and painted or oxidized surfaces have an emissivity of 0.95. Inaccurate readings will result from measuring shiny or polished metal surfaces. To compensate, cover the surface to be measured with masking tape or flat black paint. Measure the tape or painted surface when the tape or painted reach the same temperature as the material underneath.


## 2. Quick start instruction

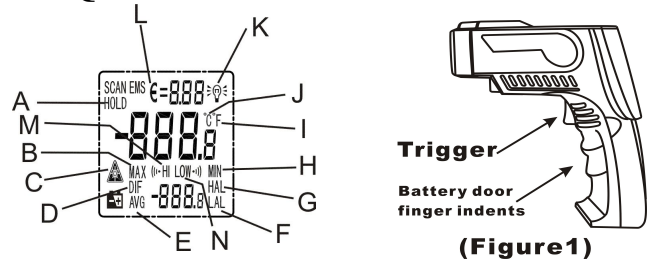

1. Press battery door clip, install battery correctly. Pull the trigger, LCD display reading & battery icon. Release the trigger and the reading will hold for 30 seconds.


### LCD display:

- A Data Hold
- B Maximum
- C Laser pointer turn on prompt
- D The maximum and the minimum difference
- E Average
- F Low temperature alarm temperature
- G High temperature alarm temperature
- H Minimum
- I Fahrenheit symbol
- J Centigrade symbol
- K Backlight symbol
- L Emissivity symbol
- M Alarm of high temperature prompt
- N Alarm of Low temperature prompt

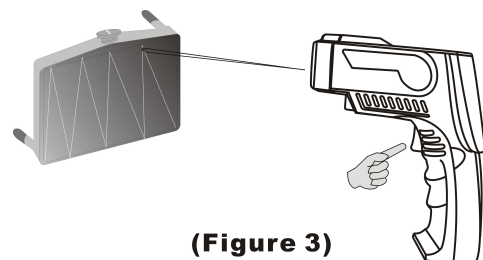

(Figure 3)

- Locating a hot spot aim the thermometer outside the area of interest, then scan across with up and down motions until you locate the hot spot.(please turn on the laser to for accurate measuring)

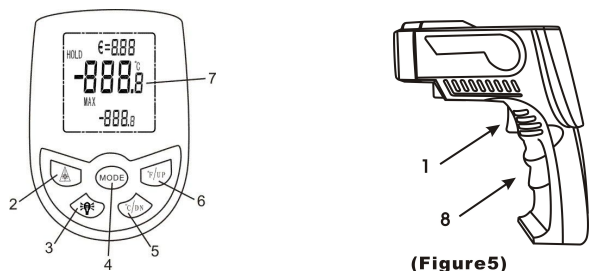

(Figure5)

### 3. Diagram description

- Trigger : Press for turn on, and then display test result and hold data 30 seconds automatically ("HOLD") after unclamping switch. Trun off automatically after 30 seconds without operate.
- Laser pointer button : press it for turn on laser pointer, press again for turn off.
- Back light button : When product working, press it for turn on back light, press again for turn off.
- MODE button: Press MODE button for cycle options - MAX - AVG - MIN – DIF - LAL – HAL mode. Long Press the button, enter into setting emissivity and setting alarm temperature.Press button for cycle options: Setting emissivity- alarm of low temperature-alarm of high temperature.Again long Press the button exit program

A、MAX: Measure maximum data current;  
 B、MIN: Measure minimum data current; ;  
 C、AVG: Calculate the average of all measure data;  
 D、HAL: Alarm of high temperature. Option HAL mode, press " UP/DN " button for set alarm temperature. When LCD display " HI " means measure result exceeded the alarm temperature;  
 E、LAL: Alarm of low temperature. Option HAL mode, press " UP/DN " button for set alarm temperature. When LCD display " LOW " means measure result under the alarm temperature;

- °C /DN button : In "Alarm temperature" and "setting emissivity" mode for adjust value down .When product working, turn on product and press direct for °Cselect.
- °F /UP button: In "Alarm temperature" and "setting emissivity" mode for adjust value up .When product working, turn on product and press direct for °F select
- LCD
- Battery door: When replace battery door, please using the finger indents to pull open the battery door.

### 3、Maintenance

- Lens cleaning: Blow off lose particles using clean compressed air. Gently brush remaining debris away with a moist cotton cloth.
- Case cleaning: Clean the case with a damp sponge/cloth and mild soap.
- Please take out the battery when not using for a long time.

Note:

- Do not use solvent to clean lens.
- Do not submerge the unit in water.

- Emissivity will back to the initial value (0.95) after replacing battery,. Should adjust again when use.

### 4、specifications

Temperature range	HP 1300	-50°C to 1300°C (-58to2372°F)
	HP 1120	-50°C to 1120°C (-58to2048°F)
	HP 920	-50°C to 920°C (-58to1688°F)
	HP 720	-50°C to 720°C (-58to1328°F)
Accuracy	3% reading+3°C, -50°C to 0°C (-58 to 32°F) 2% reading +2°C, 0°C above	
Repeatability	1%of reading or 1°C	
Response time	500msec, 95%response	
Spectral response	8-14um	
Emissivity	0.1~1.0 adjustable	
Ambient operating range	0°C to ~40°C (32 to 104°F)	
Relative humidity	10-95% RH noncondensing	
Storage temperature	-20~60°C (-4~140°F) without battery	
Ambient temp range of guarantee for accuracy	23°C~28°C	
Weight/dimensions	130g; 146×80×38mm	
Power	9V battery, 6F22 or NEDA 1604	
Battery life	Laser models:12hrs	
distance spot ratio	16:1	

Display "AL" means Ambient temp lower than 0°C";  
 Display "AH" means Ambient temp higher than 60°C";  
 Display above code in normal Ambient temp, probable means this meter was broken.

#### Attached list : Applicable Emissivity for Different Material ( For reference only )

Material	Emissivity	Material	Emissivity
Asphaltum	0.90 to 0.98	Textile (Black)	0.98
Beton	0.94	Human Skin	0.98
Cement	0.96	Soap bubble	0.75 to 0.80
Sand	0.90	Charcoal (powder)	0.96
Soil	0.92 to 0.96	Lacquer	0.80-0.95
Water	0.92 to 0.96	Lacquer (reluster)	0.97
Ice	0.96 to 0.98	Rubber (Black)	0.94
Snow	0.83	Plastic	0.85-0.95
Glass	0.90 to 0.95	Timber	0.90
Ceramic	0.90 to 0.94	Paper	0.70-0.94
Marble	0.94	Chromic oxide	0.81
Gypsum	0.80 to 0.90	Copper Oxide	0.78
Compo	0.89 to 0.91	Iron Oxide	0.78 to 0.82
Brick	0.93 to 0.96	Stainless steel	0.2-0.3

Above picture and content just for your reference.  
 Please be subject to the actual products if anything different or updated. Please pardon for not informing in advance.